

PermaLite Square Columns

- Weather Proof
- Insect Proof
- Load Bearing
- Low Maintenance

- Light Weight
- Ready for Paint
- Lifetime Warranty




The HB&G PermaLite square column is the latest addition to the HB&G synthetic column family. New PermaLite columns are cost effective, load bearing, versatile, and


require very little maintenance. The PermaLite is available in plain, fluted and recessed panel styles, in widths of 6", 8", 10" and 12" and heights from 8' - 12'.



PermaLite Square Fluted PermaLite Recessed (with panel kit) PermaLite Recessed (with panel kit) PermaLite Recessed (with 2-panel kits) PermaLite Plain

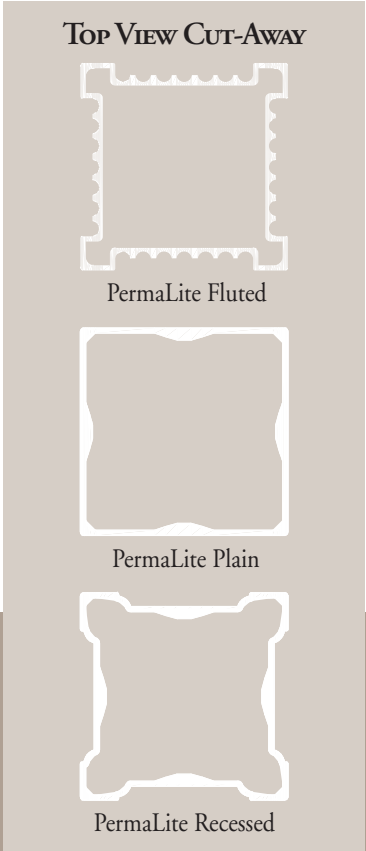


Angular Greek Ionic

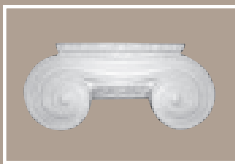

Greek Erectheum



Roman Ionic

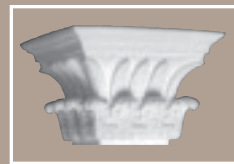

Temple of the Winds



Flatstock Base




Tuscan Cap




Colony Cap




Empire

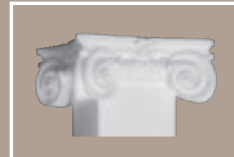

Scamozzi

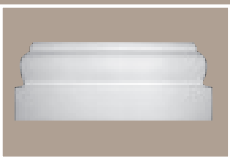

Tuscan Base

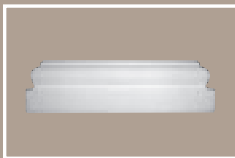

Colony Base



Attic Base



Roman Corinthian

See pages 23 and 24 for Cap and Base Dimensions.

PermaLite Square Columns


PLAIN, FLUTED AND RECESSED PANEL SQUARE PERMALITE COLUMN DIMENSIONS (IN INCHES)

Col. Size	A	C	D	E	G	J	K	L	N	O	P	Length Avail. (ft.)
6"	5 1/2"	8 1/2"	1 1/2"	1 3/4"	1"	7/8"	1 1/16"	8"	N/A	N/A	N/A	6,8,9,10
8"	7 1/2"	10 3/8"	1 7/8"	2 3/8"	1"	1"	1 3/8"	10 1/8"	8"	8"	4 7/8"	6,8,9,10,12
10"	9 1/2"	13"	2 3/8"	2 7/8"	1"	1 1/4"	1 3/4"	12 3/4"	9"	9"	5 5/16"	6,8,9,10,12
12"	11 1/2"	15 1/4"	2 3/4"	3 1/4"	1"	1 3/8"	2"	15 7/8"	N/A	N/A	N/A	6,8,9,10,12

NOTE: Recessed Panel top inset – 8"=8", 10"= 9"; Bottom inset – 8"=8", 10"=9".
See page 24 for Ornamental Capital Dimensions.

INSIDE DIMENSION

Col. Width	Inside
6"	5 1/4"
8"	7 1/4"*
10"	9 1/4"*
12"	11 1/4"

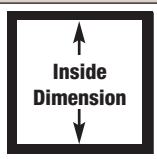


*Fluted Inside Dimensions 8" – 5 7/8"; 10" – 7 3/4"

*Recessed Panel Inside Dimensions 8" – 5 3/4"; 10" – 8"

LOAD BEARING SPECIFICATIONS

Col. Width	Structural Load (lbs)
6"	5,000
8"	6,500
10"	7,000
12"	7,500

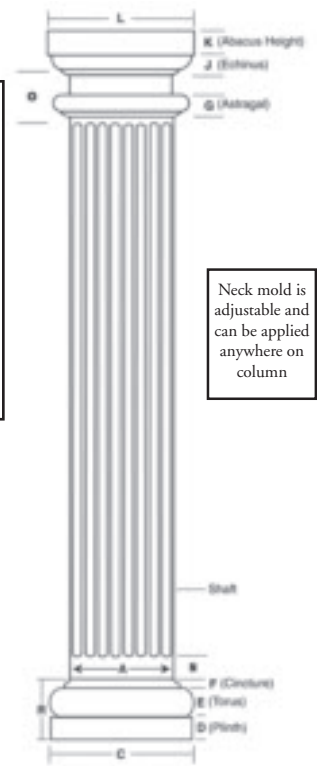

Neck mold is adjustable and can be applied anywhere on column

PermaLite Square Column shown fluted with Tuscan Cap and Base.



Lifetime Warranty

HB&G warrants that for the "lifetime" of ownership the PermaLite column is free from defects in material and workmanship. "Lifetime" means as long as the purchaser owns the structure to which the PermaLite columns are attached. Upon proper installation of the column, HB&G will repair or replace, at its option, any PermaLite column that has failed as a result of defective material or workmanship of HB&G. In the event of a claim against this warranty, proof of purchase, with date will be required to affect such a claim. Installation cost not included. HB&G gives no other warranty expressed or implied.